## 1. What are the different types of licenses issued by WPC?

#### ANS:

## **Network License to operate:**

- 1) Beacon
- 2) CORDECT/CDMA
- 3) Captive Radio paging
- 4) Wide Area Radio Paging
- 5) Captive Radio Trunking
- Public Mobile Radio Trunking Service(PMRTS)
- 7) Captive VSAT
- 8) Commercial VSAT
- 9) GSM
- 10) Earth station for foreign mission
- 11) Experimental
- 12) Fixed/Land Mobile-HF/VHF/UHF-new
- 13) Fixed/Land Mobile-HF/VHF/UHF-additional category
- 14) Terrestrial Broadcast (FM/CRS/MW/SW/HPT/LPT/DTT-new
- 15) Terrestrial Broadcast (FM/CRS/MW/SW/HPT/LPT/DTT-additional category
- 16) Captive Trunking-new (below 806 MHz)
- 17) Captive Trunking-additional category (below 806 MHz)
- 18) Others (RADAR, BEACON, AIS, Any other)-Below 806 MHz
- 19) HF/VHF for Foreign Mission
- 20) MW Broadcast
- 21) MW link for Foreign Mission
- 22) MW link for Cellular(GSM)
- 23) MW link for WLL(CDMA)
- 24) MW link for Point to Point Communication
- 25) MW link for Point to Multipoint(for ISP,ILD,NLD)
- 26) MW link for wide area Radio Paging
- 27) Radar
- 28) Remote Controller
- 29) SCADA
- 30) Satellite Broadcast
- 31) Satellite Network-Gateway for ISP,ILD,NLD
- 32) Satellite Network-Receive only Earth Station
- 33) Satellite News Gathering
- 34) Shot Range UHF Hand Held Radio (USR)
- 35) Spread Spectrum
- 36) TV Receive Only Dish Antenna(TVRO) for Foreign Mission

## Non-Network License to operate:

- 1) Aero mobile Station
- Dealer Possession License(DPL)
- 3) Non-Dealer Possession License(NDPL)
- 4) Demonstration
- 5) Import
- 6) Maritime Mobile Station
- 7) Operator's License For GMDSS

- 8) Operator's License For COP
- 9) Operator's License For Amateurs

#### 2. How Network License is different from Non-Network License?

ANS:

The division is based on the procedure adopted for licensing. Frequency allocation and Creation of Station are two important procedures in creating Network License. For Non-network license, Earmarked frequencies (pre-allocated frequencies) are available as per International and National Norms to be chosen from whereas in certain cases of Non-Network licenses, frequencies are not required to be assigned at all.

## 3. Do all wireless products require a license to operate?

ANS:

With the exception of a few low power devices that operate in the **license-free band**, Broadcasting Receiver, TVRO System rest of all equipment requires a license to operate.

# 4. What are the license- free bands? What are the wireless products that are exempted from licensing for possession and use?

ANS:

Please check the following:

- 1) Indoor use of low power wireless equipment in the frequency band 2.4GHz to 2.4835GHz.
- 2) Use of low power wireless equipment in the frequency band 2.4GHz to 2.4835GHz
- 3) Indoor use of low power wireless equipment in the frequency band 5GHz
- 4) Indoor use of low power wireless equipment in the frequency band 5GHz-Amndment
- 5) Outdoor use of wireless equipment in the frequency band 5.825-5.875GHz
- 6) Use of low power wireless equipment in the frequency band 865-867MHz for RFID
- 7) Use of low power wireless equipment in the frequency band 865-867MHz for RFID-Amendment
- Use of low power wireless equipment in the 335MHz band fro remote control of Cranes
- 9) Use of low power wireless equipment in the 335MHz band fro remote control of Cranes-Amendment
- 10) Use of low power wireless equipment in the Citizen Band 26.957-27.383MHz
- 11) Use of low power wireless equipment in the Citizen Band 26.957-27.383MHz-Amendment

# 5. If a particular product is exempted from license, still I need to notify WPC about it before use? Can I import the same without need of any license?

ANS:

If the product is not Type Approved, then it is required to inform WPC and obtain Type Approval from WPC. Import License is required from WPC to import any equipment, other than Broadcasting Receiver and TVRO System.

## 6. What is the procedure to obtain a license from WPC?

ANS:
<ol> <li>File the license application on-line in <a href="https://saralsanchar.gov.in">https://saralsanchar.gov.in</a> in the appropriate category without skipping any steps</li> <li>After filling on-line, Read the Checklist Provided.</li> <li>After filling on-line, upload digitally signed application</li> <li>Follow the subsequent instruction from WPC. Keep a watch on the status of the license application on the Web site. A mail and SMS notification is also sent when required.</li> </ol>
7. I am unable to complete the step 1 above?
ANS:
Please create a user profile with an ID for filing the application. Log in the Web site use this ID and follow the instructions.
8. If I make a mistake while filling on-line application, how can I rectify the mistake?
ANS:
You can modify the application any number of times before final submission.
9. Is the above procedure is uniform for all types of license?
ANS:
Yes the procedure is same for types of license
10. How can I import a wireless product?
ANS:
An import license from WPC is required to import any wireless equipment.
11. Is the license procedures same for individual wireless users and Companies?
ANS:
Yes.
12. How can I find the status of my application On-Line?

ANS:

Log-in at the SaralSanchar web site. Then click the application ID in your dashboard of Previous Applications.

## 12. Do I need to physically come to WPC, New Delhi to get a license?

## ANS:

No, Licence will be available for download on the portal. You will get notification of all such events through mail &SMS.

# 13. Where are the WPC regional offices located?

## ANS:

There are 5 Regional Licensing Offices (RLO) throughout India. These are given below.

Serial No.	Address of Regional Licensing Office	Territorial Jurisdiction
1	North, New Delhi  WPC Wing Regional Licensing Office, Ministry of Communications, Northern Regional Wireless Monitoring HQRS Campus, Mehrauli Gurgaon Road, New Delhi – 110030 Tel. 91 11 26502671 Fax. 91 11 26502860	Delhi, Rajasthan, Punjab, Haryana, Chandigarh, J & K, Himachal Pradesh, Uttar Pradesh , Uttaranchal.
2	Eastern, Kolkata  WPC Wing Regional Licensing Office, Ministry of Communications, Eastern Regional Wireless Monitoring HQRS Campus, (PO) Sarkarpole, Gopalpur, Kolkata - 700143 Tel. 91 33 24011431 Fax. 91 33 24019407	West Bengal, Bihar, Jharkhand, Orrisa, Sikkim, Andaman & Nicobar.
3	Western, Mumbai  WPC Wing Regional Licensing Office, Ministry of Communications, Western Regional Wireless Monitoring HQRS Campus, Gorai Road, Borivali (West), Mumbai – 400091 Tel. 91 22 28672351 Fax. 91 22 28672351	Maharashtra, Gujrat, Goa, Daman and Diu, Dadar& Nagar Haveli, Madhya Pradesh &Chattisgarh.
4	Southern, Chennai  WPC Wing Regional Licensing Office, Ministry of Communications, Southern Regional Wireless Monitoring HQRS Campus (PO) Perungudi,	Andhra Pradesh, Karnataka, Kerala, Tamilnadu, Minicoy, Pondichery and Lakshadeep.

	Kandanchavadi, Chennai – 600096.	
	Tel. 91 44 24960172 Fax. 91 44 24960235.	
5	North East, Guwahati	Arunachal Pradesh, Assam, Meghalaya,
		Manipur, Mizoram, Nagaland, and
	WPC Wing Regional Licensing office,	Tripura.
	Ministry of Communications,	
	Administrative Block,	
	BSNL Bhawan, Pan Bazar, Guwahati – 781001.	
	Tel. 91 364 2537613 Fax. 91 364 2230893	

## 14. Do the regional offices issue all categories of License?

#### ANS:

No. These offices issue the following categories of License only.

- 1) Captive Radio Paging License.
- 2) Import License.
- 3) Maritime Mobile Station License
- 4) Aeronautical Mobile Station License.
- 5) Remote Control of Models.
- 6) Experimental License.
- 7) Demonstration License.
- 8) Short Range UHF Radio(Hand Held) license
- 9) Certificate of Proficiency for Aero mobile Services-RTR(A)
- 10) Certificate of Proficiency for Global Maritime and Safety Services(GMDSS)

Serial no 6 is Network License, Serial Number 9 and 10 are Certificates and rest are all Non-network licenses.

## 15. If I am from a small town, which is the nearest Office I can approach for getting a license?

ANS:

Application will be automatically routed as per defined flow to concern RLOs or WPC HQ.

## 16. What are DPL and NDPL?

DPL is the Dealer Possession License and NDP is Non-Dealer Possession License.

DPL is issued for the prospective dealers and distributors of wireless products. The DPL enables a person or company to possess and transact in the wireless products which are licensed through the DPL.

The NDPL is issued to an individual when he neither possess any other kind of wireless license issued by WPC nor is a dealer of wireless product, but propose to hold certain wireless equipment for which the application is submitted to WPC. Details instruction of DPL/NDPL is also uploaded seprately

## 17. Who can issue DPL and NDPL?

ANS:

The following are the addresses of the offices other than WPC head quarters that are delegated with the powers to issue DPL and NDPL.

Serial No.	State	Address of Wireless Monitoring Station/Regional Head Quarters(RHQ)	Inspection Engineer's address for this State
1	Kerala, Lakshadeep	Officer-In-Charge, Nettayam POTrivandrum-695013 Tel: 0471-2373202 FAX: 0471-2374533	Inspection Engineer, Wirless Monitoring Station, Ilnd floor, Chennamanakere Telephone Exchange, Banasankari 3rd stage,Bangalore-560085 Phone: 26690102 FAX: 26790300
2	Tamil Nadu	Campus, Chennai-600096	Inspection Engineer, SRHQ, Kandanchavadi, IWMS Campus, Chennai-600096 Tel 24960275 FAX: 24963083
3	Karnataka	Station,IInd floor, Chennamanakere Telephone Exchange,Banasankari 3rd stage,Bangalore-56 Phone: 26690102	Inspection Engineer, Wirless Monitoring Station, IInd floor, Chennamanakere Telephone Exchange,Banasankari 3rd stage,Bangalore-56 Phone: 26690102 FAX: 26790300
4	Andra Pradesh	Officer-In-Charge, IIIrd Floor, Room No. 302, Telecom Engineering Centre , Cherlapally, Hyderabad-500380 Tel 27794504 FAX: 27794530	Inspection Engineer, IIIrd Floor, Room No. 302, Telecom Engineering Centre , Cherlapally, Hyderabad-500380 Tel 27794504 FAX: 27794530
5	Vishakpattanam	Officer-In-Charge ,Door No. 39-27-41, Madhavadhara VUDA Colony, Marribalem P.O.Visakhapatnam- 530018 Tel: 2539365 FAX: 2542402	Inspection Engineer, , IIIrd Floor, Room No. 302, Telecom Engineering Centre , Cherlapally, Hyderabad-500380 Tel 27794504 FAX: 27794530
6	Goa	ChogmSangoldaRd.,PO Alto Porvorim,GOA-403112 Tel 2417245	Inspection Engineer, Wirless Monitoring Station, IInd floor, Chennamanakere Telephone Exchange, Banasankari 3rd stage, Bangalore-56 Phone: 26690102 FAX: 26790300
7	Maharstra	Engineer-In-Charge, . IMS Campus, Gorai Road, Borivli(West),Mumbai-400 092 Tel :28671626 FAX: 28650244	Inspection Engineer,IMS Campus, Gorai Road, Borivli(West),Mumbai-400 092 Tel :28671626 FAX: 28650244

8	Gujrat	Officer-In-Charge, Opp. Jagatpark Society, Ghatlodia, Ahmedabad- 380061 Tel. 2760 3444 FAX: 27603011	Inspection Engineer, Kotra, Pushkar Road,Ajmer-305004 Tel. 2600 641 FAX: 2600 593
9	Rajasthan	Officer-In-Charge, Kotra, Pushkar Road,Ajmer-305004 Tel. 2600 641 FAX: 2600593	Inspection Engineer, Kotra, Pushkar Road,Ajmer-305004 Tel. 2600 641 FAX: 2600593
10	Orissa	Officer-In-Charge ,Door No. 39-27-41, Madhavadhara VUDA Colony, Marribalem P.O.Visakhapatnam- 530018 Tel: 2539365 FAX: 2542402	Inspection Engineer,ChindwaraRoad,POKoradi T.P.S.,Nagpur-441111 Tel.2612114 FAX: 2612040
11	Bihar	Officer-In-Charge, P.O.Harmoo Housing Colony,Ranchi-834012 Tel.2243023 FAX: 2241433	Inspection Engineer,ChindwaraRoad,POKoradi T.P.S.,Nagpur-441111 Tel.2612114 FAX: 2612040
12	Jharkhand	Officer-In-Charge, P.O.Harmoo Housing Colony,Ranchi-834012 Tel.2243023 FAX: 2241433	Inspection Engineer,Village-Gopalpur,PO Sarkarpool,24-Parganas,Kollkota-743352 Tel.24012960 FAX: 24019407
13	Delhi	Engineer-In-Charge, .Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380	Inspection Engineer,Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380
14	Punjab	Officer-In-Charge, Main Garhi Road, Hardyal Nagar(Nr. Brahma Kumari Ashram), Jalandhar City -144022 Tel 225210 FAX: 232544	Inspection Engineer,MainGarhi Road, Hardyal Nagar(Nr. Brahma Kumari Ashram), Jalandhar City -144022 Tel 225210 FAX: 232544
15	Haryana	Engineer-In-Charge, .Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380	Inspection Engineer,Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380
16	Chandigarh	Officer-In-Charge, . Main Garhi Road, Hardyal Nagar(Nr. Brahma Kumari Ashram),Jalandhar City -144022 Tel 225210 FAX: 232544	Inspection Engineer,MainGarhi Road, Hardyal Nagar(Nr. Brahma Kumari Ashram),Jalandhar City -144022 Tel 225210 FAX: 232544
17	Himachal Pradesh	Officer-In-Charge, . Main Garhi Road, Hardyal Nagar(Nr. Brahma Kumari Ashram), Jalandhar City -144022 Tel 225210	Inspection Engineer,MainGarhi Road, Hardyal Nagar(Nr. Brahma Kumari Ashram), Jalandhar City -144022 Tel 225210

		FAX: 232544	FAX: 232544
18	UP	Officer-In-Charge, GurauliBujurg, ChappiaP.O. Khajani Road,Gorakhpur- 273016 Tel. 2321709 FAX: 2323481	Inspection Engineer,Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380
19	Uttranchal	Officer-In-Charge, GurauliBujurg, ChappiaP.O. Khajani Road,Gorakhpur- 273016 Tel. 2321709 FAX: 2323481	Inspection Engineer,Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380
20	Madya Pradesh	Officer-In-Charge, 66-A, Sec-B, ShahpuraBhopal-462003 Tel 2464653 FAX: 433930	Inspection Engineer,ChindwaraRoad,POKoradi T.P.S.,Nagpur-441111 Tel.2612114 FAX: 2612040
21	Chattisgarh	Officer-In-Charge, 66-A, Sec-B, ShahpuraBhopal-462003 Tel 2464653 FAX: 433930	Inspection Engineer,ChindwaraRoad,POKoradi T.P.S.,Nagpur-441111 Tel.2612114 FAX: 2612040
22	West Bengal	Engineer-In-Charge,Village-Gopalpur ,PO Sarkarpool,24-Parganas,Kollkota- 700143 Tel.24012960 FAX: 24019407	Inspection Engineer,Village-Gopalpur ,PO Sarkarpool,24-Parganas,Kollkota-700143 Tel.24012960 FAX: 24019407
23	Arunachal Pradesh	Officer-In-Charge Girdharilal G SardarmallsBldg,Mancotta Road,Dibrugarh-786 001 Tel. 2325238, 2326887.	Inspection Engineer,Lapalang Rynjah,Shillong-793006Tel 537613 FAX:233727
24	Assam	Officer-In-Charge Girdharilal G SardarmallsBldg,Mancotta Road,Dibrugarh-786 001 Tel. 2325238, 2326887	Inspection Engineer,Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727
25	Meghalaya	Officer-In-Charge, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727	Inspection Engineer, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727
26	Manipur	Officer-In-Charge, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727	Inspection Engineer,Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727
27	Mizoram	Officer-In-Charge, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727	Inspection Engineer, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727

28	Nagaland	Officer-In-Charge, LapalangRynjah,Shillong-793006 Tel 537613 FAX:233727	Inspection Engineer,LapalangRynjah,Shillong- 793006 Tel 537613 FAX:233727
29	Sikkim	Officer-In-Charge, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727	Inspection Engineer, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727
30	Tripura	Officer-In-Charge, Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727	Inspection Engineer,Lapalang Rynjah,Shillong-793006 Tel 537613 FAX:233727
31	Darjeeling	Officer-In-Charge ,Lasha Villa, Near Shiv Mandir,515/3/1, III rd Floor, Hill Cart Road,Darjeeling-734 111 Tel 252383 FAX: 257100	Inspection Engineer,Village-Gopalpur,PO Sarkarpool,24-Parganas,Kollkota-743352 Tel.24012960 FAX: 24019407
32	Mangalore	Officer-In-Charge, Wireless Monitoring Station, 9-153/24 Near Vaidyanath Temple, Shakthinagar, Mangalore- 575016 Tel 0824-2216692, 2210692 FAX: 0824-2210792	Inspection Engineer, 18, Padmanabha Nagar, Banasankari, II stage, Bangalore- 560 070 Phone: 26690102 FAX: 26790300
33	Nagpur	Officer-In-Charge ,ChindwaraRoad,POKoradi T.P.S.,Nagpur-441111 Tel.2612114 FAX: 2612040	Inspection Engineer,ChindwaraRoad,POKoradi T.P.S.,Nagpur-441111 Tel.2612114 FAX: 2612040
34	J&K	9	Inspection Engineer,Ghitorni, PO Mehrauli,New Delhi-110 030 Tel: 26502658 FAX: 26502380